



KRUPS[®]
DELIGHT IN THE DETAILS



To purchase accessories and key maintenance products for your product go to:
www.krups.co.uk/accessories-store/home

www.krups.co.uk

KRUPS[®]
DELIGHT IN THE DETAILS

MACHINE TOP TIPS

- 1 Light-medium roasts are the best to start with if you are new to the own ground coffee experience, this will help you find the best flavour and aroma of coffee for you.
- 2 Use your machine on a regular basis once or twice a day, leaving your machine for longer periods of inactivity can be bad for the quality of the output. If you are leaving your machine for longer periods (eg to go on holiday) empty the water tank and remove the beans (store in an airtight container in a cool, dry place). Ensure you clean your machine before first use upon return by running a full coffee through to clean the system.
- 3 Do a quick rinse when you use the steam arm to remove milk residue. A quick clean after every use can increase the longevity of your machine. Just rinse off and wipe the arm before going to enjoy your fresh coffee.
- 4 When using a new bean roast, start at the most coarse grind setting, and adjust to taste. Be careful of flavoured beans or extra dark roast coffee as some beans become oily in the roasting process and can cause blockages in the grinders. The finer the grind setting the slower the flow of coffee to your cup. Always make a long coffee using a coarse grind.
- 5 Good Crema indicates all is well; if you have a good crema on the espresso you've made, it's a good indication that the brewing cycle and machines are well maintained. Follow the machine's cleaning cycle indicators, as they are defined based on the water quality and heat preferences you have selected when installing the machine. Ensure you check your water quality every season (Spring, Summer, etc) as it can change through the year depending on your water provider.



For instructional videos on how to setup your machine and maintenance, please visit the KRUPS Youtube Channel (you can find this by searching "krups uk" on YouTube.com) or Download the KRUPS Espresso Application

Available on...



For any help or support, please call our KRUPS in house customer service team on:
0345 330 6460 (UK) or 01 677 4003 (ROI)



**QUICK START GUIDE
& MAINTENANCE**

KEEP THIS GUIDE SOMEWHERE SAFE SO YOU HAVE IT AT HAND WHEN CLEANING YOUR KRUPS MACHINE





MACHINE START UP

Congratulations on purchasing your new KRUPS Arabica bean to cup machine! We recommend you follow the steps below to get your machine up and running as soon as possible.

SWITCHING ON THE MACHINE

- 1 Press the once to switch on the machine. You will hear the machine beep and the will light up.

CHECKING YOUR WATER HARDNESS

- 2 Fill a glass of water and insert the water hardness test strip. You can find the test strip in your KRUPS welcome pack.

- 3 After 1 minute read the level of water hardness.

| Degree of water hardness | Appliance setting |
|--------------------------|-------------------|
| Soft | 0 |
| Slightly Hard | 1 |
| Moderately Hard | 2 |
| Hard | 3 |
| Very Hard | 4 |

SETTING YOUR WATER HARDNESS

Before accessing your machine settings, ensure the machine is plugged in but not turned on.

- 4 To access the maintenance hatch remove the cup tray located at the top of your machine. To do this, press down on the back corners of the cup tray to release the cover.
- 5 Press the and simultaneously. The light will come on.
- 6 A digital display can be found under the cup tray.
- 7 For water hardness, the digital display numbers will be ranked from 0 to 4. You change the numbers by pressing until it matches your required appliance setting in the table above.

To leave the settings mode press .

For access and information for all machine settings see the full user manual.

INSTALLING THE WATER FILTER

- 8 Remove the water tank from the back of the machine.
- 9 Set the month when the cartridge is fitted (*left side of the cartridge*) by turning the grey ring located on the upper end of the filter. The month when the cartridge should be replaced is indicated on the right side of the cartridge or indicated by your machine.
- 10 Screw the filter cartridge into the bottom of the water tank using the accessory supplied with the cartridge.
- 11 Fill and replace the water tank.
- 12 Place a 600ml container under the steam exit and hold the button for more than 3 seconds. The will stop flashing when the installation is complete.

We recommend your machine is always fitted with a water filter, which is replaced every 3 months or when prompted by your machine.

PREPARING A DRINK

Now that you have set up your Arabica machine, it's time to prepare your drink. Simply follow the instructions below.

ENJOY A BLACK COFFEE

- 13 Remove the lid of the coffee bean container and add coffee beans (*max. 250 g*).
- 14 Place the cup(s) under the coffee nozzles. You can lower or raise the coffee outlet according to the size of your cup or glass.
- 15 Select the volume of coffee by turning the dial.

Select the key to get a strong espresso or the key to get a standard espresso.

ENJOY TWO COFFEES AT ONCE

- 16 Place both cups under the coffee nozzles. You can lower or raise the coffee outlet according to the size of your cup or glass.
- 17 Select the volume of coffee by turning the dial.

The strength of the espressos must be the same when making two drinks at once. Select the button twice to get two strong espressos, or the button twice to get two standard espressos. The light will come on with a double flash to inform you that you have requested two cups of coffee.

The appliance will automatically carry out two cycles of coffee preparation, with a pause in between.

ENJOY FROTHY MILK

- 18 Press the button. The light will flash during the pre-heating stage.
- 19 Once the pre-heating stage is complete the light will remain constant. Pour the milk into your milk jug and immerse the nozzle in the milk. Only fill the jug half way to leave room for the milk to froth.

Press the icon to start frothing the milk. Gradually lower the milk jug as the froth accumulates. Once the milk is frothy enough, press the icon to stop the steam.

We recommend cleaning the steam nozzle once you are ready to switch off your machine and after preparing a milk based drink. See *"Cleaning your steam nozzle"* for further instructions.

MACHINE MAINTENANCE

To ensure that your machine is running smoothly for years to come, we recommend you follow the maintenance steps below.

CLEANING YOUR STEAM NOZZLE

We recommend cleaning the milk nozzle once you are ready to switch off your machine or after preparing a milk based drink.

- 20 Place a container under the steam nozzle and hold the button for 3 seconds to start a steam circuit rinsing cycle, which will automatically stop after approximately 300 ml.

- 21 Remove and rinse the steam nozzle. Wash it with water and washing up liquid using a small non-abrasive brush to remove the milk residue.

- 22 Ensure that the air holes are not blocked by any milk residue. If necessary, unblock them using the needle supplied with the machine.

DESCALING YOUR MACHINE

We recommend descaling your machine when the alert appears on the display. The frequency of descaling is dependent on your machine usage.

The 'CALC' light will appear when the machine needs to be descaled. To begin the descaling program press the button. The light and button will flash.

Remove, empty and replace the drip tray and place a 600ml container under the steam nozzle as shown in *"Emptying your coffee grounds"*.

- 23 Fill the water tank up to the 'CALC' line, dissolve one sachet of KRUPS descaling powder (40g) into the tank and replace onto the machine. Once complete press the button to continue with the descaling program.

- 24 The first phase (8 minutes) of the program will begin. At the end of this stage the machine will beep for 10 seconds and the light will flash. Empty the 600ml container and return it under the steam nozzle. Empty, rinse, refill and replace the water tank. Once complete press the button to continue with the descaling program.

The second phase (6 minutes) of the program will begin to rinse and remove any traces of the descaling powder from the machine. At the end of this stage the machine will beep for 10 seconds. Empty the 600ml container and return it under the steam nozzle. Once complete press the to continue with the descaling program.

The final phase (6 minutes) will begin and perform a full rinse of the machine. Once the descaling cycle is finished, the 'CALC' light will turn off.

We recommend installing a water filter to protect your machine against the build up of scale, see *"Installing the water filter"* section under *"Machine start up"*.

CLEANING YOUR MACHINE

We recommend running a cleaning program when prompted by your machine or following a long period of inactivity.

- 25 The 'CLEAN' light will appear when the machine needs to run the cleaning program. To begin the cleaning program press the button. The light and button will flash. Remove, empty and replace the coffee grounds collector, drip tray and 600ml container. Fill up the water tank.

Access the cleaning tablet funnel as shown in *"Setting your water hardness"*.

- 26 Insert a KRUPS Cleaning tablet into the cleaning tablet funnel. Once complete press the button to continue with the cleaning program.

The first phase (10 minutes) will begin at the end of this stage the machine will beep for 10 seconds. Empty and return the 600ml container and the drip tray. Once complete press the button to continue with the cleaning program.

The final phase (3 minutes) will begin and perform a full rinse of the machine. Once the cleaning cycle is finished, the 'CLEAN' light will turn off.

EMPTYING YOUR COFFEE GROUNDS

- 27 & 28 When the light flashes you must remove, empty and clean both the coffee grounds collector and the drip tray.